

**Before connecting the faucet to the water supply, flush the tubing
thoroughly to eliminate any residue /**

**Antes de conectar la grifería a la distribución de agua, purgue muy bien la cañería
a fin de eliminar partículas extrañas.**

Trim for 1/2" thermostatic valve with one outlet / Vista para válvula termostática de 1/2" de una salida

FV237/K6K.0 ; FV237/K6V.0 ; FV237/K7K.0 ; FV237/K7H.0

FV237K.0 ; FV237V.0 ; FV237R.0 ; FV237D.0

FV237/K1.0 ; FV237/K1H.0

FV237/K3.0 ; FV237/K3H.0

FV237/K4.0

FV237/F4.0

FV237/J1.0


FV237.0


FV237/F7.0

FV237/J9.0


FV237/59.0

FV237/J2.0

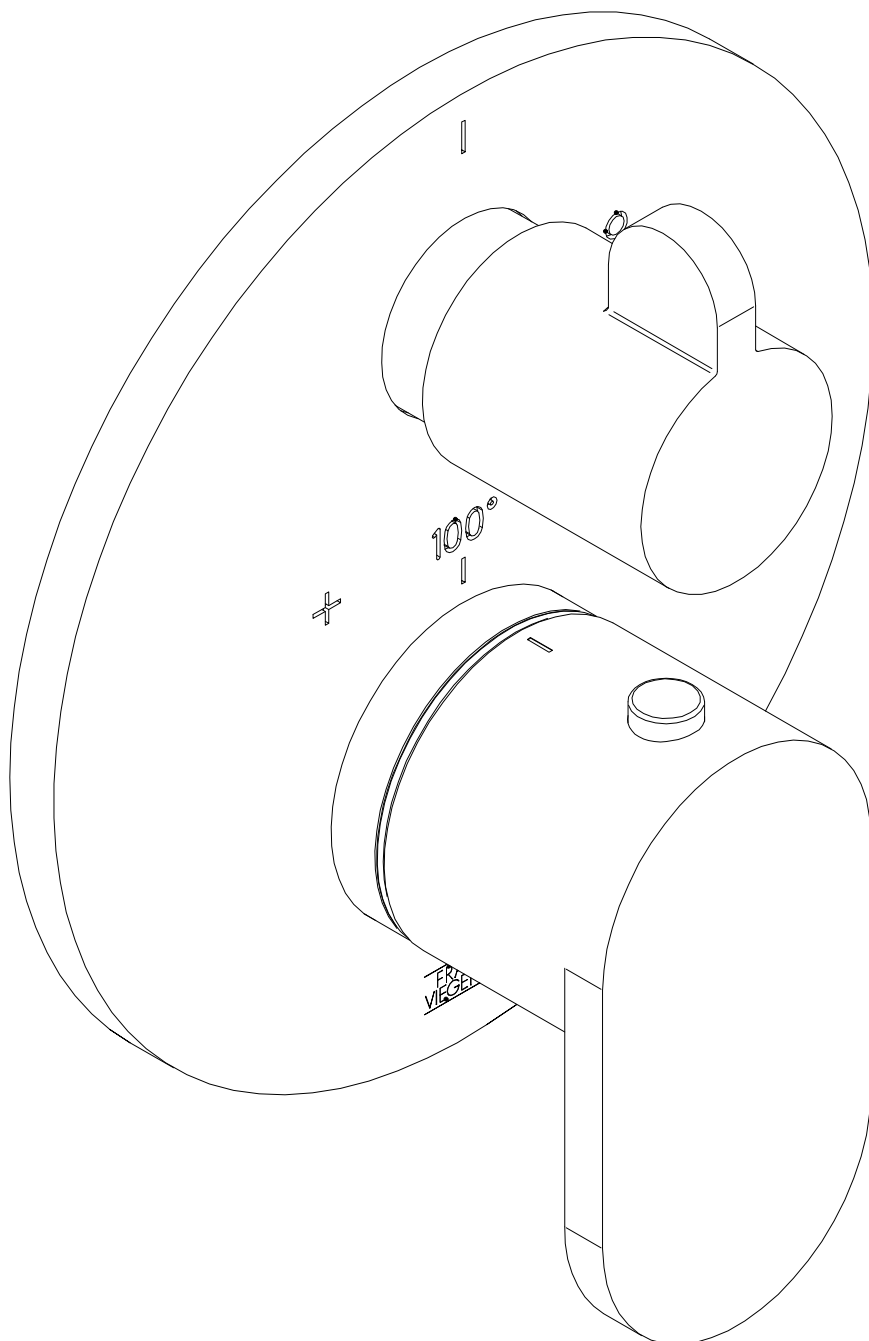


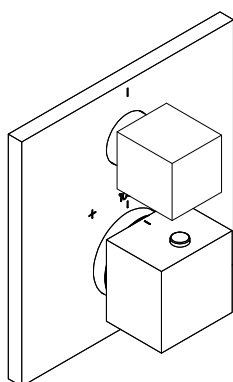


237

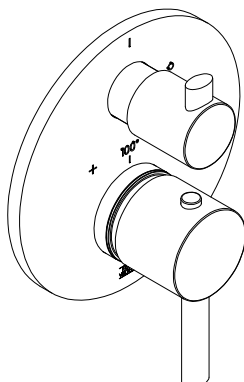


59

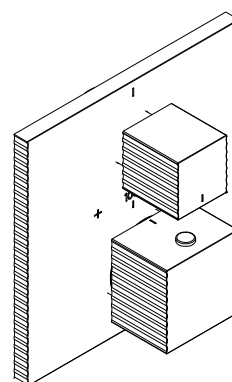


F4

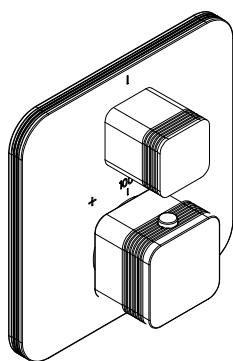


F7

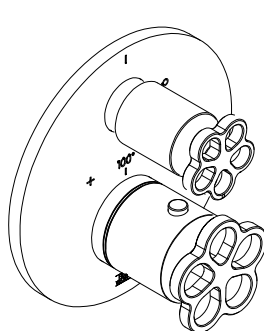


J1

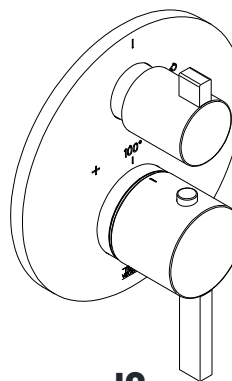


J2

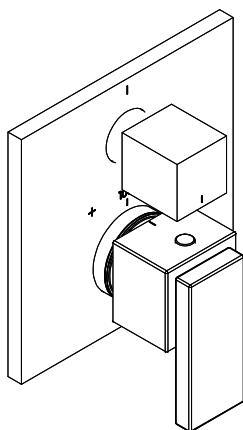


J9

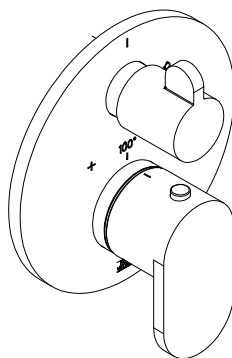


K1

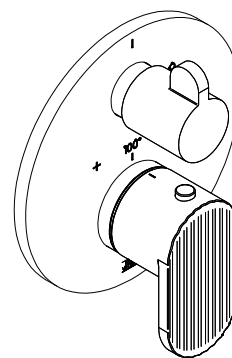


K1H

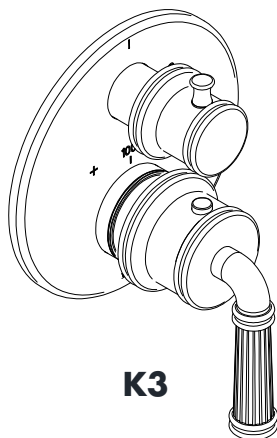


K3

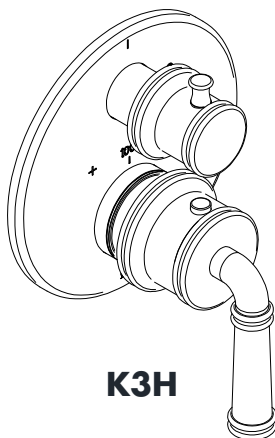


K3H

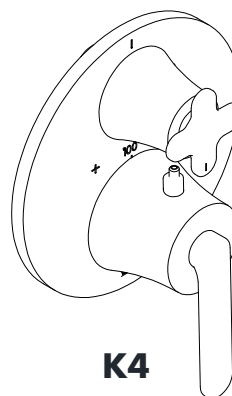


K4

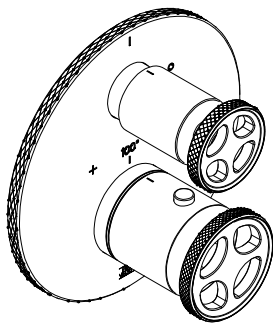


K6K

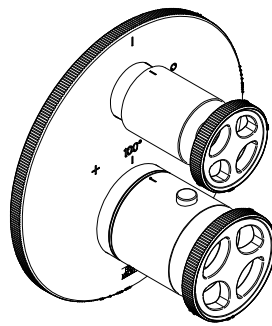


K6V

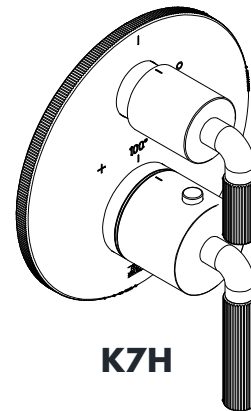


K7H

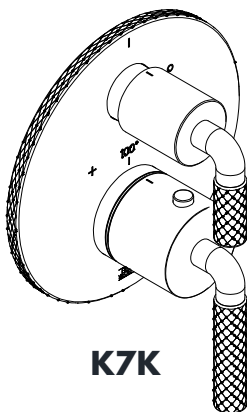


K7K

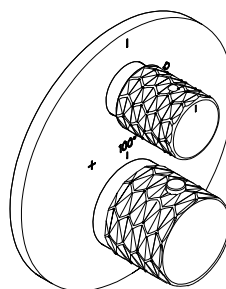


237D

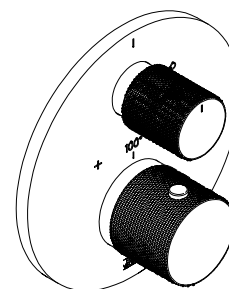

237K

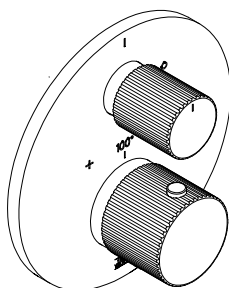

237V

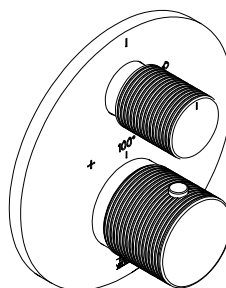

237R

In order to explain the way that Franz Viegner 237 thermostatic valve trims should be installed It's shown K1 line as an example.

However, the steps shown on this installation guide can be used to install any other 237 trim.

Con el fin de explicar como deben ser instaladas las vistas Franz Viegner para válvula 237 se utiliza a modo de ejemplo la linea K1.

Sin embargo, los pasos mostrados en este folleto servirá para la instalación de cualquier vista para válvula 237.

Required installation tools / Herramientas necesarias para la instalación


Provided / Provistas

Not Provided / No Provistas



Allen Wrench
Llave Allen

Exploded view / Vista explotada

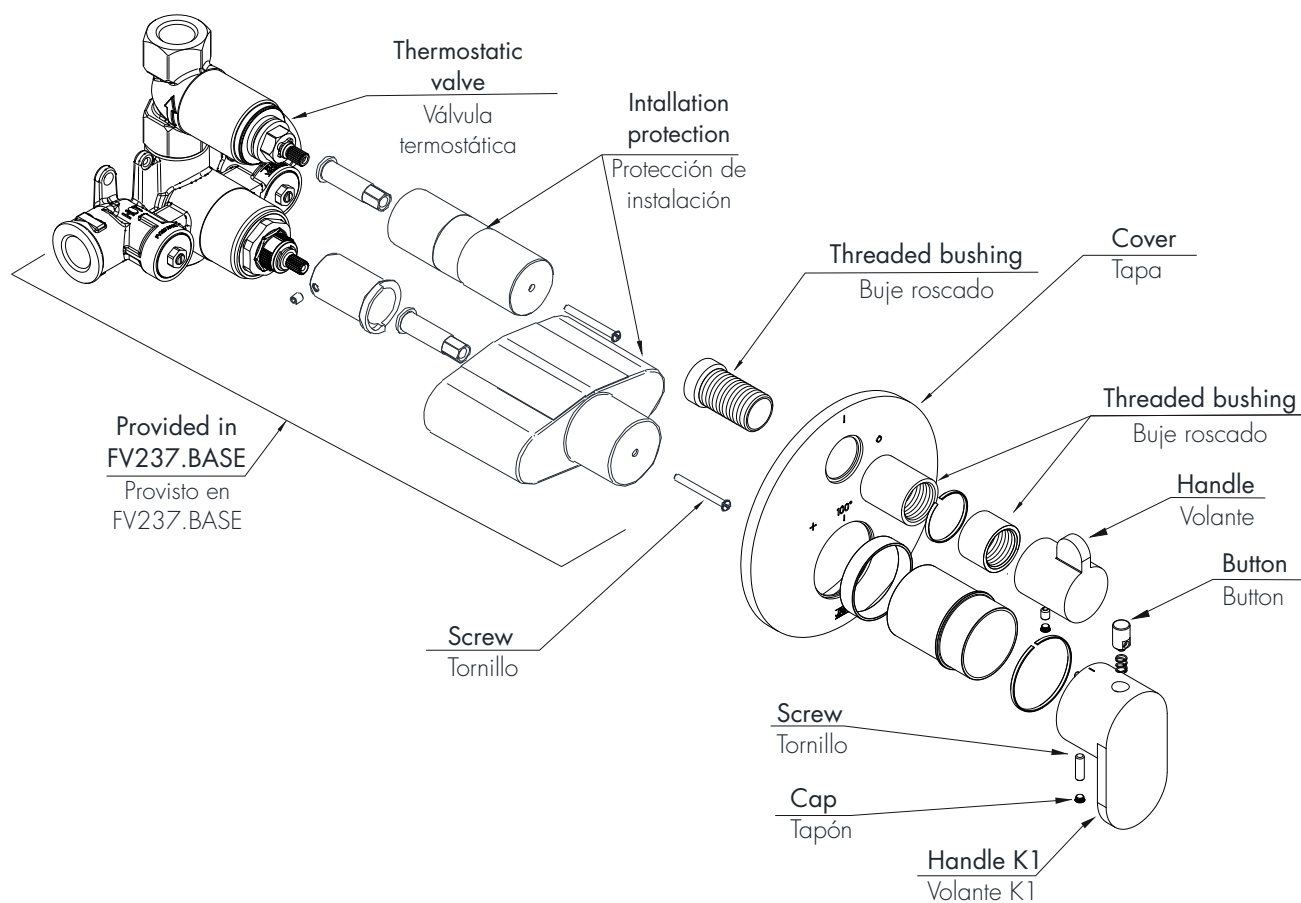




Installation / Instalación




Thermostatic trim installation / Instalación de la vista







Before start installing the trim, make sure the water supply is closed.

Antes de instalar la vista, asegúrese de que el suministro de agua este cerrado.


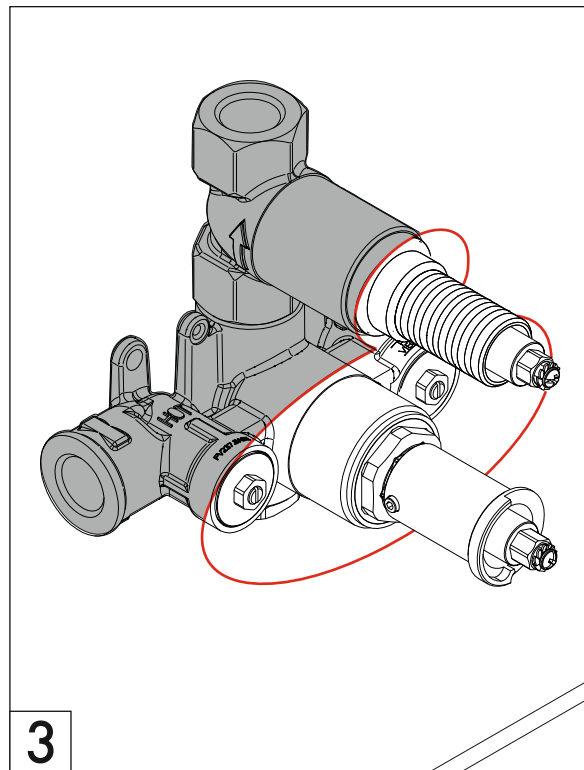
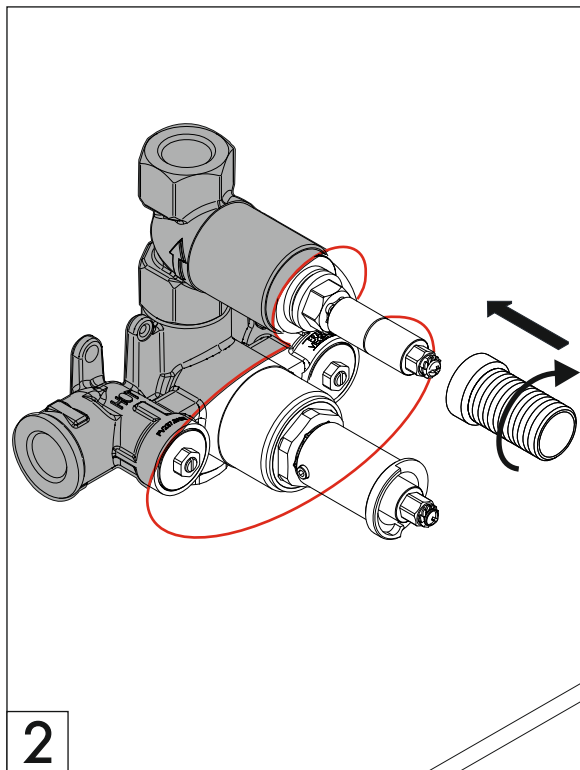
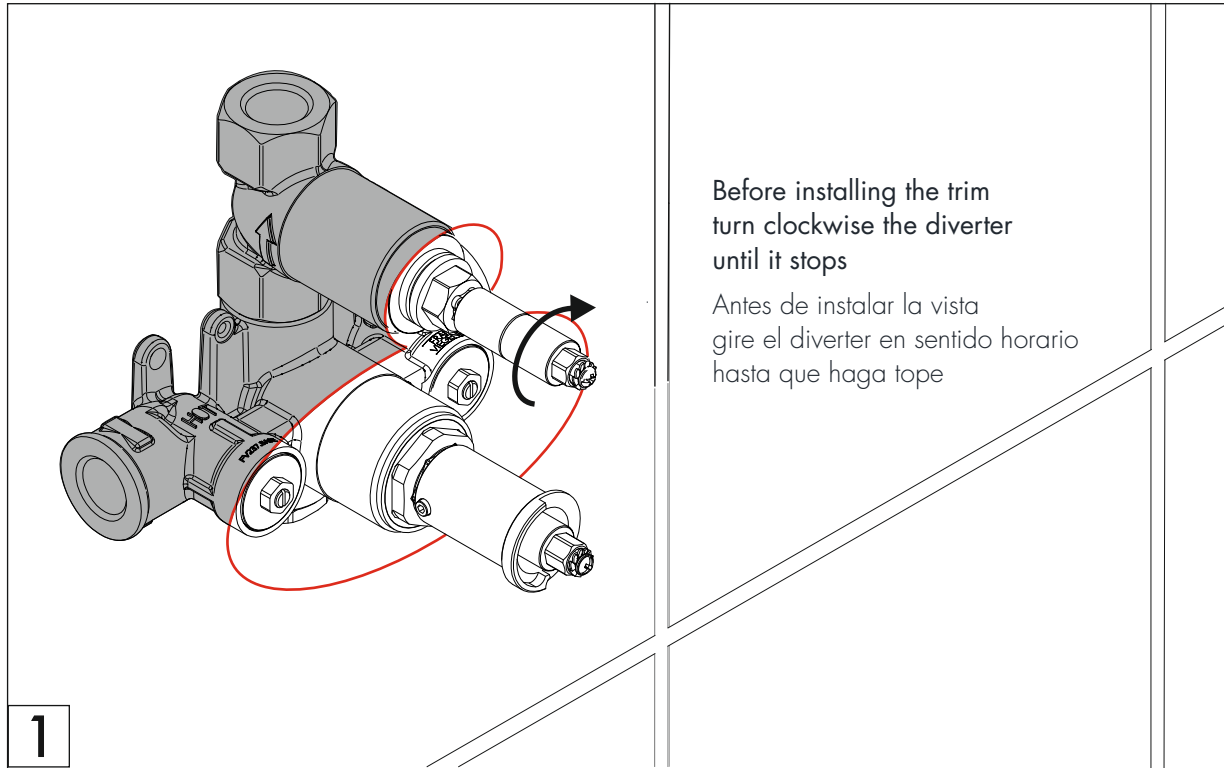


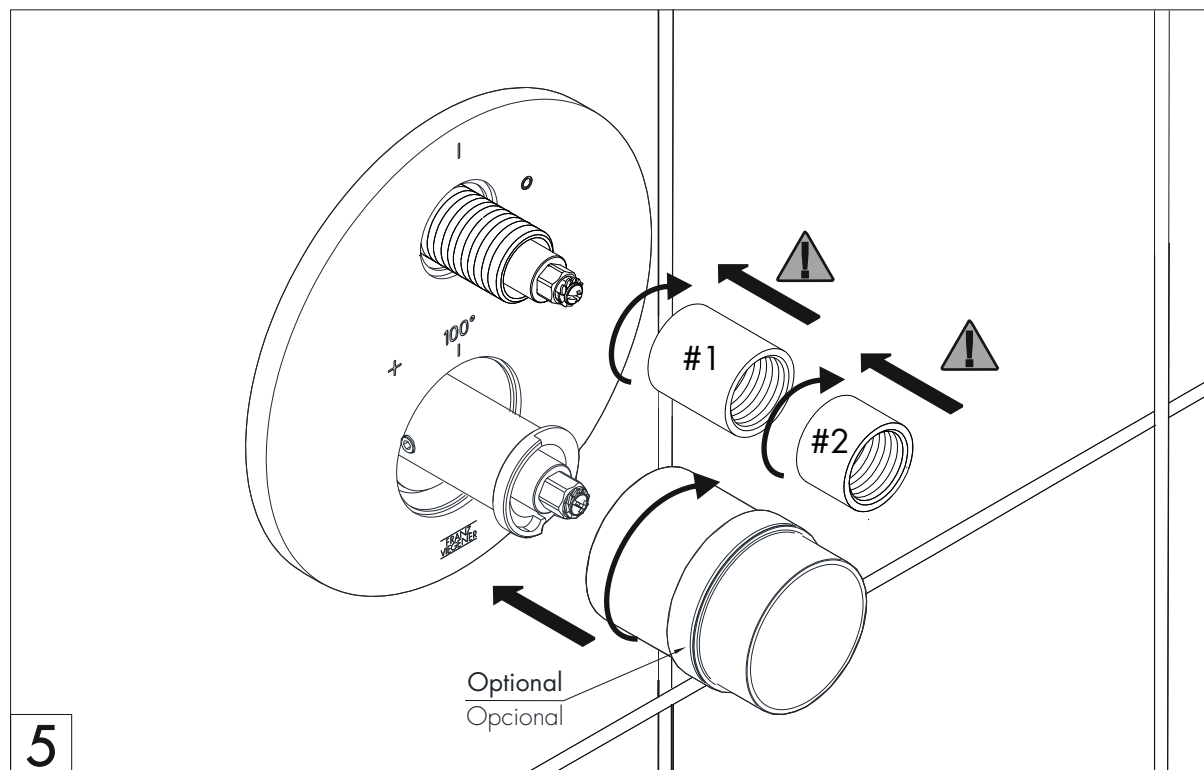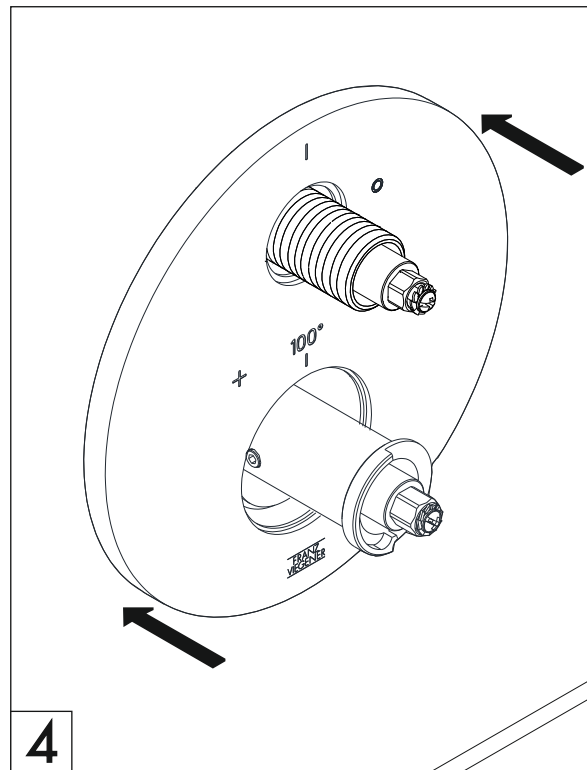
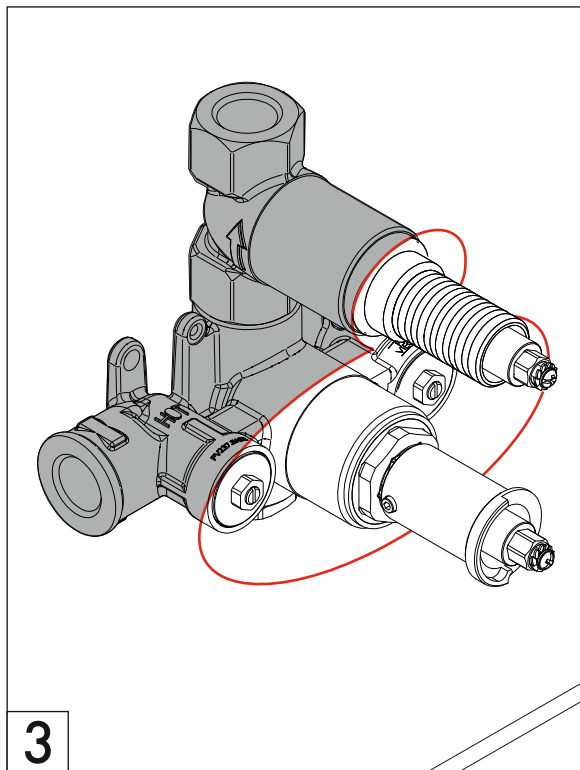


- ⚠ For valve's installation depth between 70mm - 80mm use the bushing #1
Para profundidad de instalación entre 70mm - 80mm usar buje #1
- ⚠ For valve's installation depth between 80mm - 89mm use the bushing #2
Para profundidad de instalación entre 80mm - 89mm usar buje #2

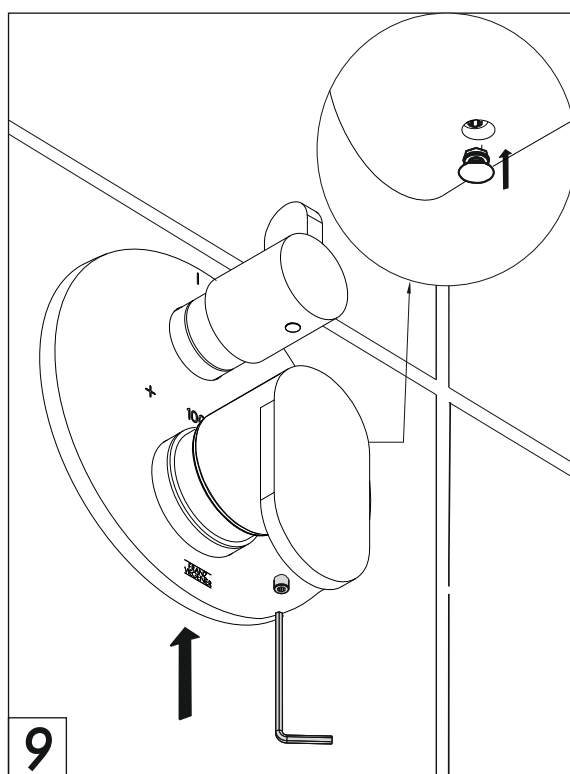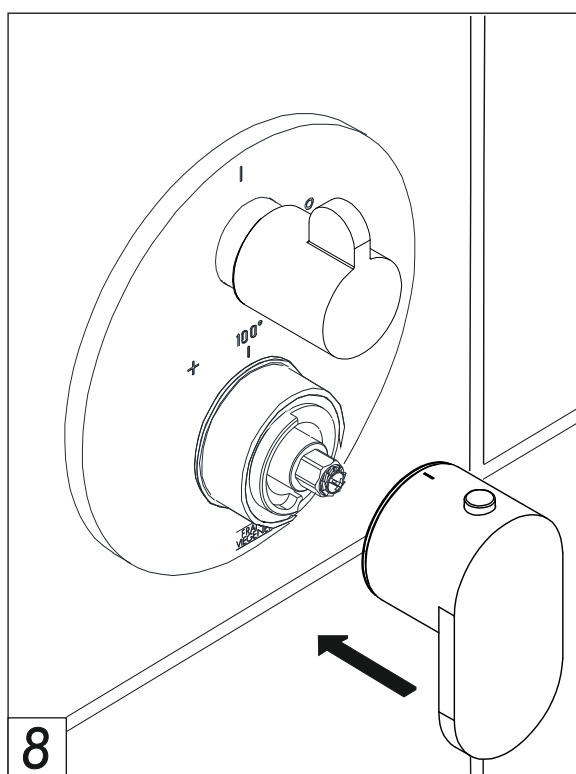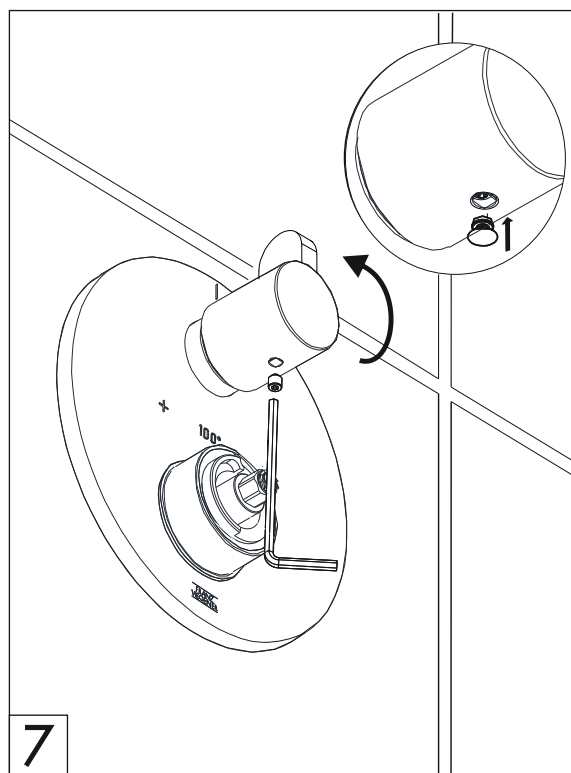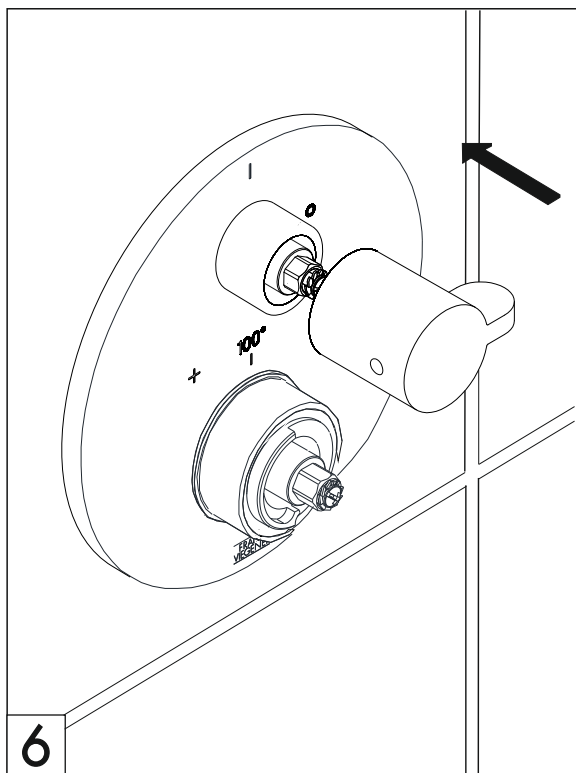


Temperature limit button / Botón limitador de temperatura

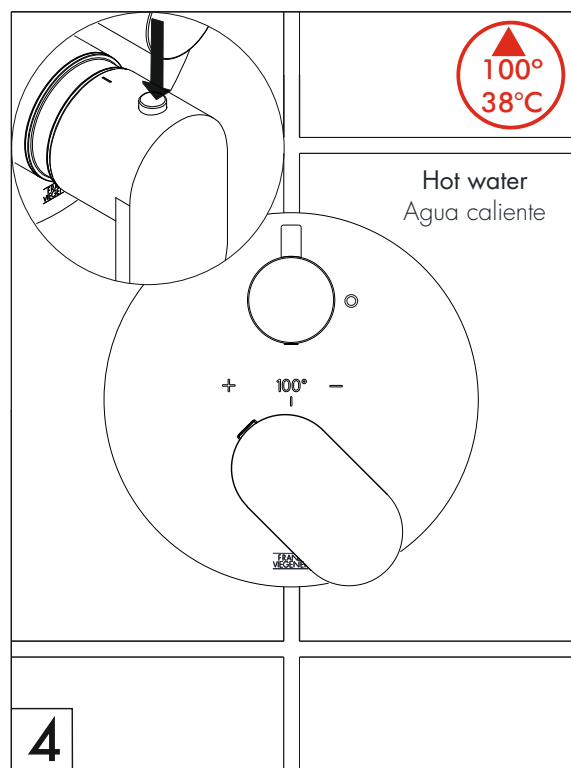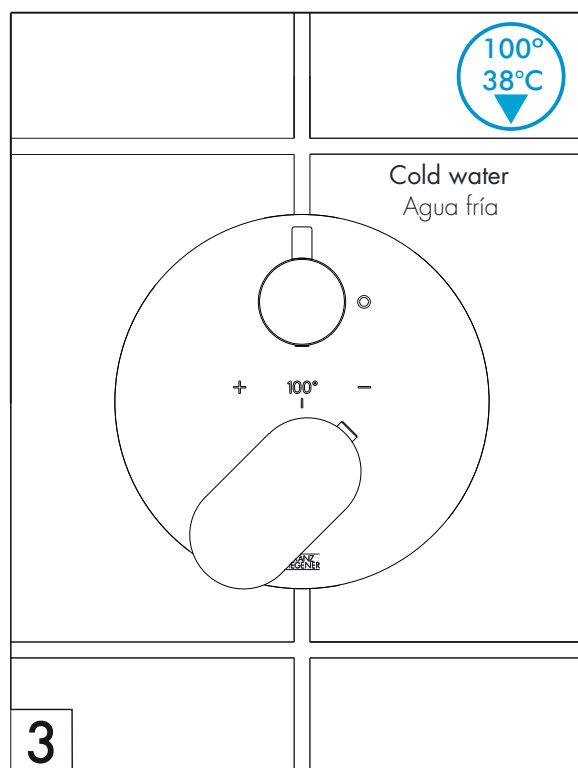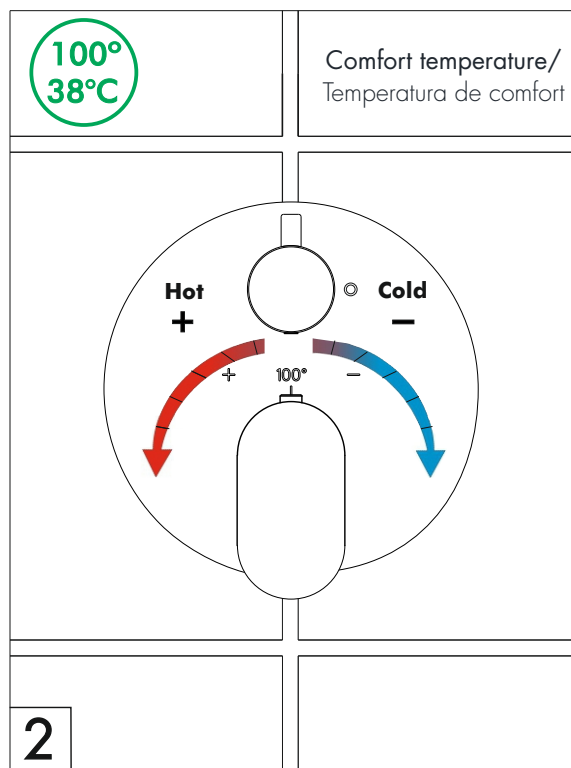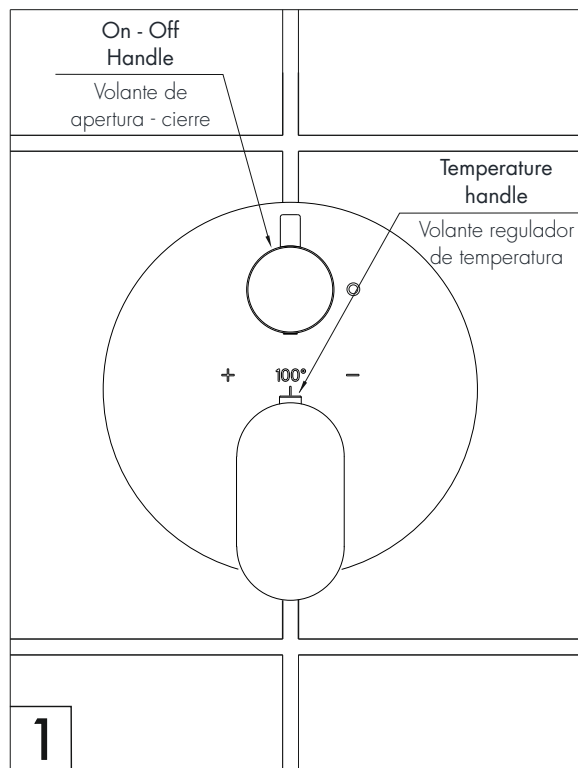

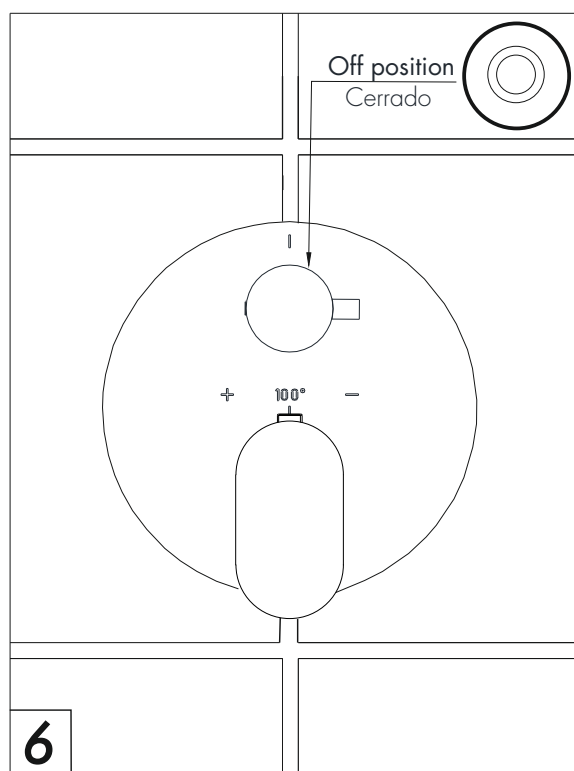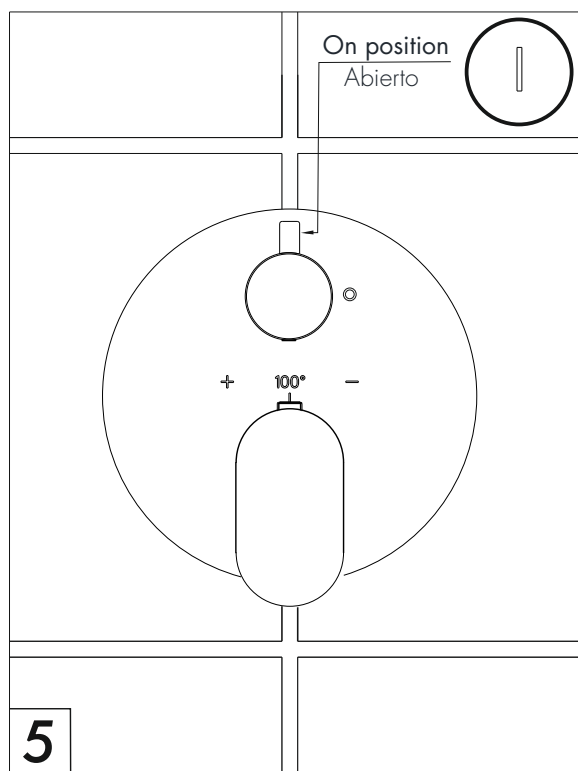

WARRANTY: For more information please visit <https://franzviegener.com/warranty/>

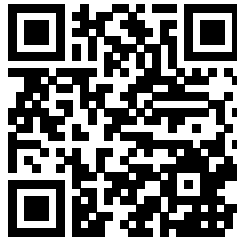

FRANZ VIEGENER Customer Service Department

Phone 847-244-3837 - info@franzviegener.com.

4000 Porett Drive - Gurnee, IL, 60031-USA.

Follow us on social media!



Scan the code
to get more
information
about this line.

www.franzviegener.com