


FRANZ VIEGENER


---

**Accessories domino**

---


*i n s t a l l a t i o n*

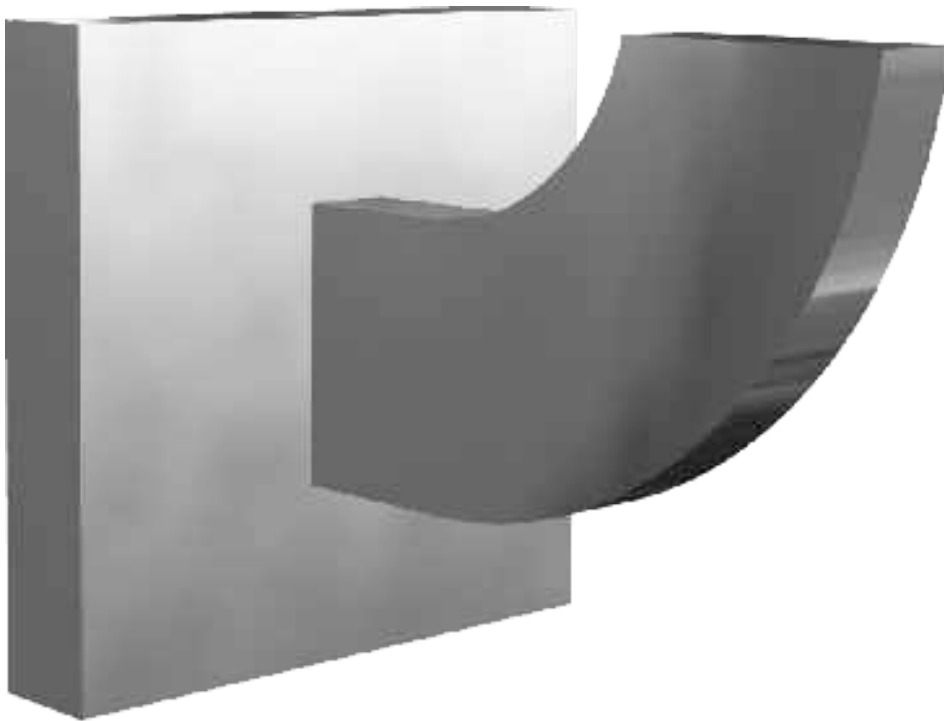

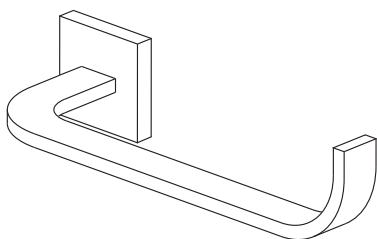

**Short Towel bar**

FV163/J4

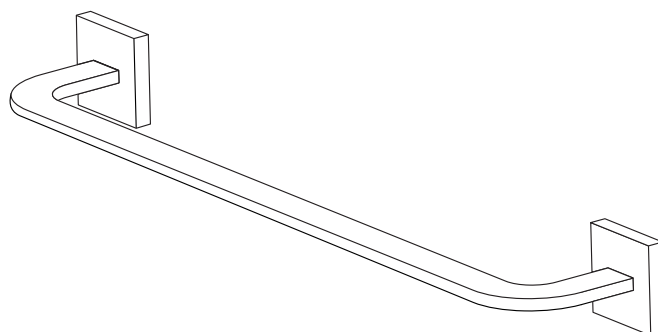


**Towel bar**

FV164/J4 (17 11/16")


FV164.01/J4 (23 5/8")

FV164.02/J4 (29 1/2")

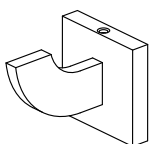

**Robe hook**

FV166/J4

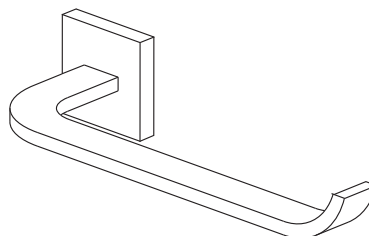


**Toilet roll holder**

FV167/J4

---


## Installation instructions

---

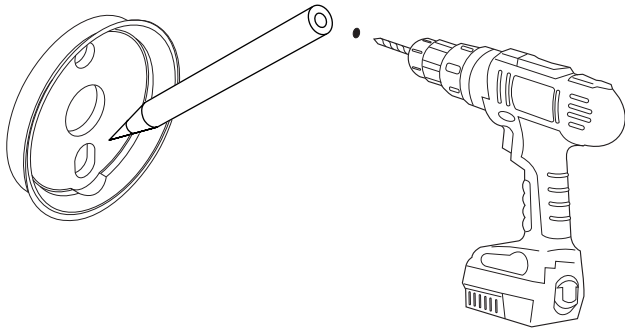


1\_Using the support (in the position the figure shows), mark the place where you will drill the first hole to mount the accessory.

2\_Make the necessary hole for No 6 plastic anchor.

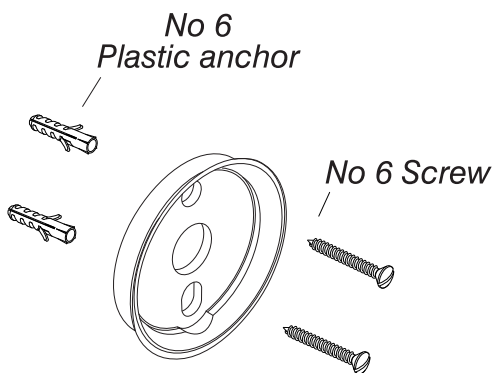

3\_Affix the support to the wall using the screws and the plastic anchors provided. Repeat the procedure (1 and 2) to complete the fixation of the support.

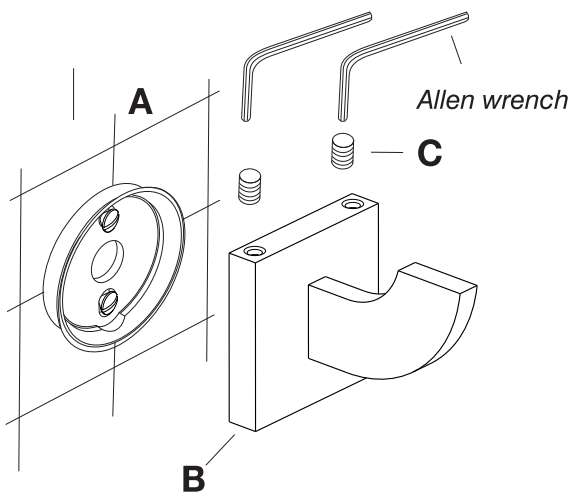

4\_Place the accessory (B) over the support (A), keeping all pressed to the wall.


Tighten the set-screw (C ) with the Allen wrench provided.

---

## Accessories with two supports


---

### Assembling

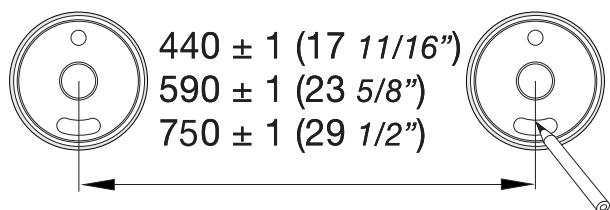


*For accessories such as towel bars, please bear in mind the following:*

*a\_Mark the distance between both supports before you start. Make sure the holes are at the same height.*

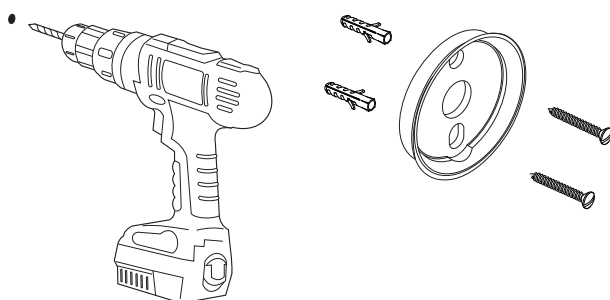

*b\_Follow previous instructions (1, 2 and 3) for affixing the supports.*

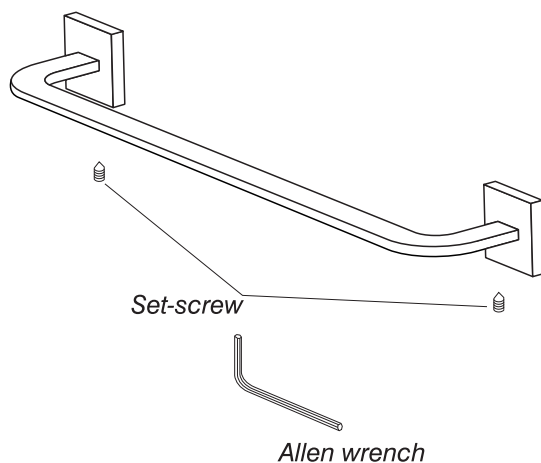

*c\_Put the complete set together, and tighten the supports (see picture).*

## Notes

[illegible]


## Notes

[illegible]

## Notes

[illegible]

**WARRANTY:** For more information please visit <https://franzviegener.com/warranty/>

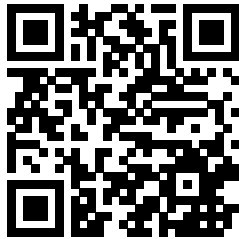

---

**FRANZ VIEGENER Customer Service Department**

Phone 847-244-3837 - [info@franzviegener.com](mailto:info@franzviegener.com).

4000 Porett Drive - Gurnee, IL, 60031-USA.

Follow us on social media!



Scan the code  
to get more  
information  
about this line.

**[www.franzviegener.com](http://www.franzviegener.com)**