FRANZ VIEGENER


Accessories Temple

installation



Accessories Temple Line


Towel ring FV162/87

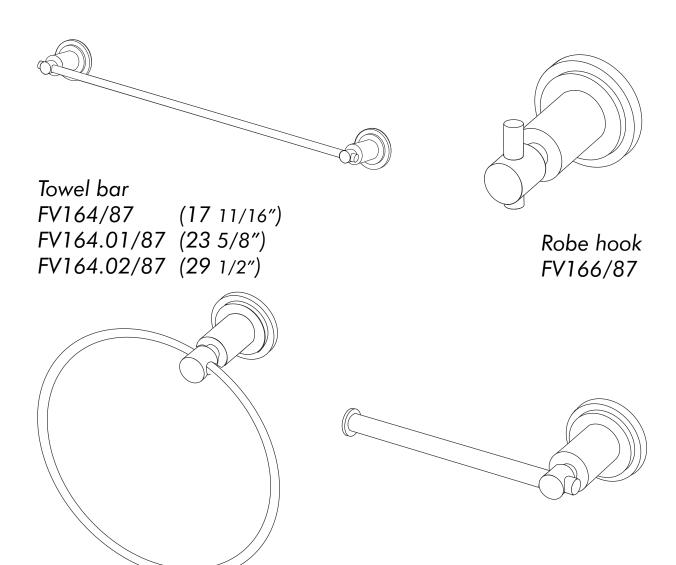

Toilet roll holder

FV167/87


Installation instructions

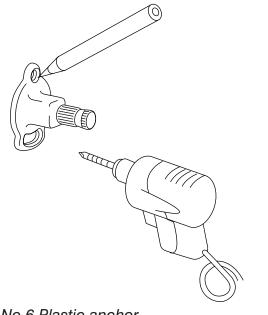

1 Using the support (in the position the figure shows), mark the place where you will drill the first hole to mount the accessory.

2 Make the necessary hole for No 6 plastic anchor and then put the plastic anchor.



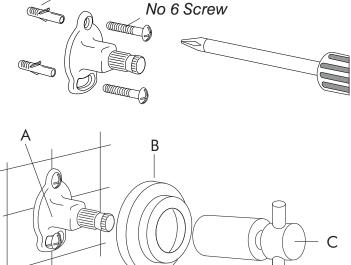


Allen wrench


3 Affix the support to the wall using the screws and the plastic anchors provided. Repeat the procedure (1 and 2) to complete the fixation of the support.

4 Slide the escutcheon (B) and the main part (C) over the support (A) until it bottom against the wall. Tighten the set-screw (D) with the Allen wrench provided.


Assembling

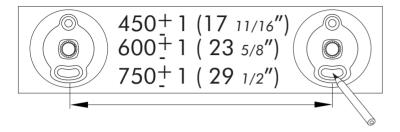

For accessories such as towel bars, please bear in mind the following:




a_Using the template attached to the towel bar, mark the places where you will drill. Take care to verify horizontals.

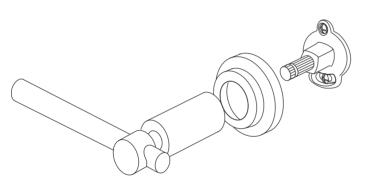

b_Follow previous instructions (1, 2 and 3) for affixing the supports.

c_Put the complete set together, without escutcheon. Tighten the supports (see picture).

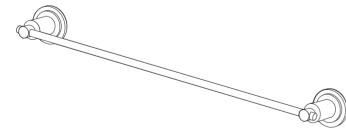

d_Put set together with the escutcheons.

Notes			

Notes			

	Notes
-	
-	
_	
_	
_	
_	
_	
_	
-	
_	
_	
_	
_	
-	
_	
-	
_	
_	
-	



WARRANTY: For more information please visit https://franzviegener.com/warranty/







FRANZ VIEGENER Customer Service Department

Phone 847-244-3837 - info@franzviegener.com. 4000 Porett Drive - Gurnee, IL, 60031-USA. Follow us on social media!



Scan the code
to get more
information
about this line.
www.franzviegener.com